



## INSTRUCTIONS FOR TIMER SWITCH - (NIGHT POSITION)

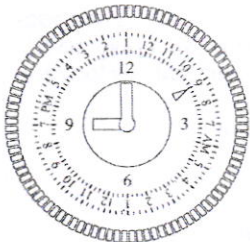

PICTURE 1

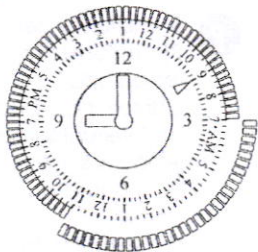

PICTURE 2

**E**

### FUNCTION OF TIMER

The TIMER switch assembled on the control panel starts the night function (cold drink dispenser).

### HOW TO USE TIMER

To use the timer switch follow these instructions:

1. Switch on the machine;
  2. See picture 1 for time reference;
  3. Set the triangle of the timer on the right local time. Please note AM - PM signs.
- N.B. Without the correct time setting, the timer will not work properly.

### TIMER PROGRAMMING (Day & Night Function)

See picture n. 2

For example, to have the machine work for slush (Day function) from 7:00 AM to 11:00 PM, push inwards all segments included in those hours, as shown in Picture 2. During the remaining hours the machine will work as a cold drink dispenser (Night function).